

WDK40Q

Capacity 4.000 kg

WDK60Q

Capacity 6.000 kg

WDK100Q

Capacity 10.000 kg

WDK120Q

Capacity 12.000 kg

WDK50HLQ

Capacity 5.000 kg



GB **User's guide**
Hydraulic Garage Jacks

Weber
UK

WEBER UK LIMITED

WEBER UK LTD

Unit 10, First Avenue, Bluebridge Ind. Est.

Halstead, Essex. CO9 2EX

Tel.: 01787 476319

Fax: 01787 274926

E-mail: sales@weberuk.com

www.weberuk.com

GB

WDK40Q, WDK60Q, WDK100Q, WDK120Q, WDK50HLQ

WARNINGS -

Safe usage instructions

1. Study, understand and follow all instructions before operating this jack.
2. Do not exceed rated capacity.
3. Use only on hard level surface.
4. It is recommended to brake and chock the vehicle.
5. Do not move or transport the vehicle while on the jack.
6. Lifting device only. Immediately after lifting, support the vehicle with support stands.
7. Lift only on areas of the vehicle as specified by the vehicle manufacturer, and only centrally on the lifting saddle.
8. No person shall remain in, on, or get bodily under a load that is being jacked or is supported only by a jack.
9. Only original accessories and spare parts shall be used.
10. No alterations shall be made to this jack.
11. Failure to follow these warnings may result in personal injury and/or property damage.

Assembly

Mount plastic handle on tube lever with inner projection to fit into slot. Push tube lever into handle until screw and nut can be mounted (use a rubber hammer to adjust handle position).

Then place lever in tipping gear, and secure it with tipping gear screw fitting into slot in tube lever.

Use

Lifting: Activate lever tube up and down using full strokes.

Lowering: Pull lever tube up, then slowly turn counter clockwise.

Maintenance

Maintenance and repair must always be carried out by qualified personnel.

Daily: Inspect jack for damages.

Monthly: Lubricate all mechanical parts with a few drops of oil.

Refilling of oil: Pump and cylinder form a closed system and refilling of oil is only necessary in exceptional cases. To check the oil level it is necessary to take out the pump, complete:

1. pump the jack half-way up.
2. keep the handle vertically and block the piston rod (39) in the inmost position by a screw or the like through the hole in the re-lease bracket. (47). Mind the inner spring.
3. Remove handle and tipping gear as well as two screws (8) on the top of the lifting frame.
4. Unfasten screw (30) and disconnect the piston rod and the base frame by lifting the lifting frame.
5. Lift the loose complete pump up and out of the lifting frame.

Correct oil level is up to lower edge of filling hole (28) keeping the complete pump vertically and the piston rod pushed in. Too much oil might cause imperfect pump function.

Oil quantity: WDK40Q/WDK60Q: 0,8 l

Oil quantity: WDK50HLQ/WDK100Q/WDK120Q: 1,3 l

Any good hydraulic oil of viscosity of ISO VG15 can be used.

NEVER USE BRAKE FLUID.

Safety Inspection

According to national legislation - minimum once a year though - the jack must be inspected by a professional: damages, wear and tear, adjustment of the safety valve, hydraulic unit for leakages.

Possible faults and how to overcome them

1. The load is dropping occasionally: Verify the play between release bracket (47) and lever tube. Adjust the two nuts (11) until the play is 1-2 mm, irrespective of the lever tube position (vertical or horizontal).
2. The jack does not lift to maximum position: refill with oil.
3. The load is dropping: leaking pump valves or worn seals. Inspect the valve seats + balls under plug (31) and change seals in lifting cylinder.
4. The hydraulic unit is leaking: exchange worn seals with repair kit.

Spare parts

Replace worn or broken parts with genuine jack manufacturer supplied parts only. All major parts may not be provided after discontinuation of a model.

Destruction

Oil must be drained off and legally disposed of.


WDK40Q
WDK60Q
WDK100Q
WDK120Q
WDK50HLQ

The drawing shows model DK50HLQ representing all 5 models.

Die Zeichnung über Modell DK50HLQ repräsentiert alle 5 Modelle.


Teckningen visar modell DK50HLQ som referens för alla 5 modellerna.

Tegningen over model DK50HLQ repræsenterer alle 5 modeller.

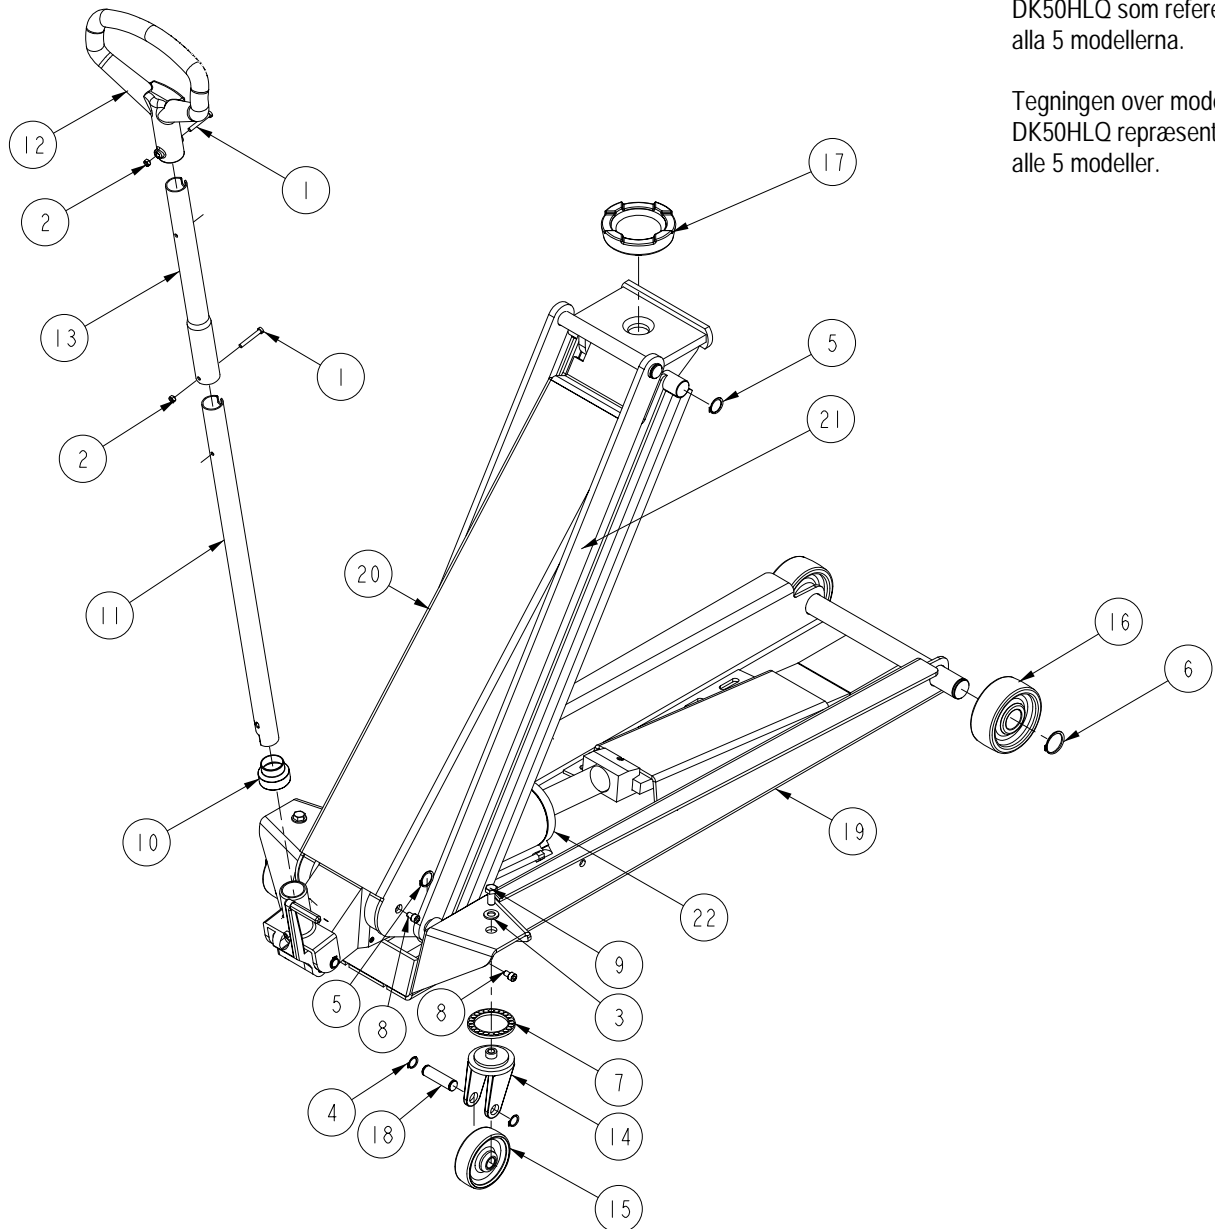

	WDK40Q	WDK60Q	WDK100Q	WDK120Q	WDK50HLQ		(DK)	(GB)	(D)
Pos.	Art.no.	Art.no.	Art.no.	Art.no.	Art.no.	Pcs.	Beskrivelse	Description	Bezeichnung
	36 025 00	36 035 00	36 045 00	36 065 00	36 040 00		Donkraft, kompl.	Jack, cpl.	Rangierheber, kompl.
1	02 028 00	02 028 00	02 028 00	02 028 00	02 028 00	1/2	Skruer	Screw	Schraube
2	02 072 00	02 072 00	02 072 00	02 072 00	02 072 00	1/2	Møtrik	Nut	Mutter
3	02 121 00	02 121 00	02 121 00	02 121 00	02 121 00	2	Skive	Washer	Scheibe
4	02 204 00	02 204 00	02 204 00	02 204 00	02 204 00	4	Låsering	Locking Ring	Schließring
5	02 206 00	02 206 00	02 206 00	02 206 00	02 206 00	4	Låsering	Locking Ring	Schließring
6	02 209 00	02 209 00	02 209 00	02 209 00	02 209 00	2	Låsering	Locking Ring	Schließring
7	02 261 00	02 261 00	02 261 00	02 261 00	02 261 00	2	Trykleje	Thrust bearing	Drucklager
8	02 308 00	02 308 00	02 308 00	02 308 00	02 308 00	4	Skruer	Screw	Schraube
9	02 322 00	02 322 00	02 322 00	02 322 00	02 322 00	2	Skruer	Screw	Schraube
10	36 009 00	36 009 00	36 009 00	36 009 00	36 009 00	1	Plastkappe	Plastic cover	Plastkappe
11	36 010 00	36 010 00	36 010 00	36 010 00	36 010 00	1	Håndtagsrør	Lever tube	Handhebelrohr
12	36 011 99	36 011 99	36 011 99	36 011 99	36 011 99	1	Håndtag	Handle	Griff
13		36 013 00		36 013 00	36 013 00	1	Håndtagsforlænger	Handle extension	Griffverlängerung
14	36 028 00	36 028 00	36 028 00	36 028 00	36 028 00	2	Hjulgaffel	Wheel fork	Radgabel
15	36 029 00	36 029 00	36 029 00	36 029 00	36 029 00	2	Hjul	Wheel	Rad
16	36 030 00	36 030 00	36 030 00	36 030 00	36 030 00	2	Hjul	Wheel	Rad
17	36 031 00	36 031 00	36 031 00	36 031 00	36 031 00	1	Sadel	Saddle	Sattel
18	36 033 00	36 033 00	36 033 00	36 033 00	36 033 00	2	Aksel	Axle	Achse
19	36 026 00	36 026 00	36 046 00	36 046 00	36 041 00	1	Kørreramme	Base frame	Fahrrahmne
20	36 027 00	36 034 00	36 047 00	36 047 00	36 042 00	1	Løfteramme	Lifting frame	Heberahmen
21	36 044 00	36 044 00	36 044 00	36 044 00	36 043 00	2	Parallelstang	Steering rod	Parallelstange
22	91 019 00	91 020 00	91 000 00	91 018 00	91 000 00	1	Pumpe, kompl.	Pump, cpl.	Pumpe, kpl.

90 019 00
91 020 00
91 000 00
91 018 00

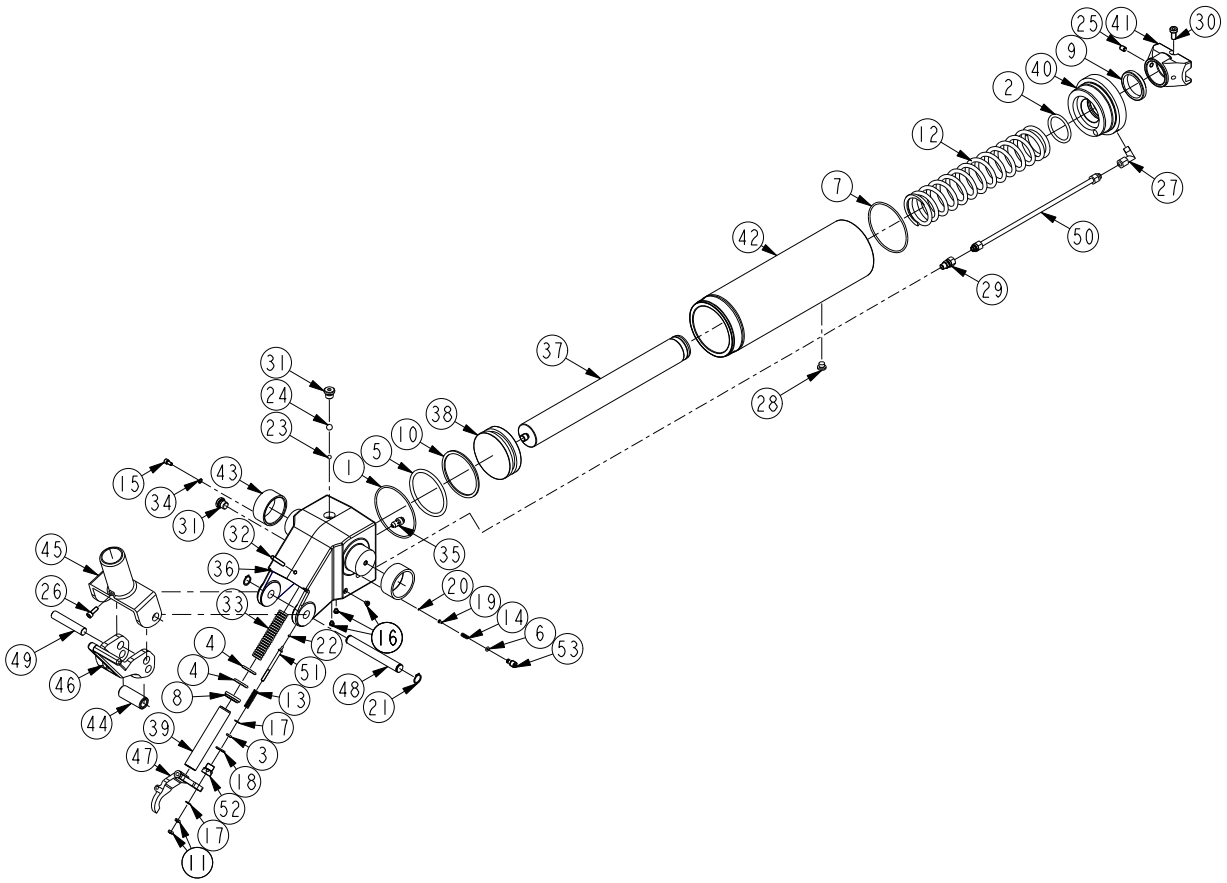


WDK40Q	WDK60Q	WDK100Q	WDK120Q	WDK50HLQ	(DK)	(GB)	(D)	
Pos.	Art. No.	Art. No.	Art. No.	Art. No.	Pcs.	Benævnelse	Description	Bezeichnung
	91 019 00	91 020 00	91 000 00	91 018 00	91 000 00	Pumpe, komplet	Pump, cpl.	Pumpe, kpl.
*1	01 007 00	01 007 00	01 011 00	01 011 00	01 011 00	1 O-ring	O-ring	O-ring
*2	01 025 00	01 025 00	01 024 00	01 024 00	01 024 00	1 O-ring	O-ring	O-ring
*3	01 039 00	01 039 00	01 039 00	01 039 00	01 039 00	1 O-ring	O-ring	O-ring
*4	01 051 00	01 051 00	01 051 00	01 051 00	01 051 00	2 O-ring	O-ring	O-ring
*5	01 071 00	01 071 00	01 083 00	01 083 00	01 083 00	1 O-ring	O-ring	O-ring
*6	01 089 00	01 089 00	01 089 00	01 089 00	01 089 00	1 O-ring	O-ring	O-ring
*7	01 050 00	01 050 00	01 216 00	01 216 00	01 216 00	1 O-ring	O-ring	O-ring
*8	01 254 00	01 254 00	01 254 00	01 254 00	01 254 00	1 Afstryger	Scraper ring	Abstreifer
*9	01 271 00	01 271 00	01 270 00	01 270 00	01 270 00	1 Afstryger Ø45	Scraper ring Ø45	Abstreifer Ø45
*10	01 309 00	01 309 00	01 301 00	01 301 00	01 301 00	1 Back-up ring	Back-up ring	Stossring
11	02 016 00	02 016 00	02 016 00	02 016 00	02 016 00	2 Møtrik	Nut	Mutter
12	02 029 00	02 029 00	02 029 00	02 029 00	02 029 00	1 Fjeder	Spring	Feder
13	02 054 00	02 054 00	02 054 00	02 054 00	02 054 00	1 Fjeder	Spring	Feder
14	02 078 00	02 078 00	02 078 00	02 078 00	02 078 00	1 Fjeder	Spring	Feder
15	02 085 00	02 085 00	02 085 00	02 085 00	02 085 00	1 Skrue	Screw	Schraube
16	02 088 00	02 088 00	02 088 00	02 088 00	02 088 00	3 Prop	Plug	Pfropfen
17	02 108 00	02 108 00	02 108 00	02 108 00	02 108 00	2 Skive	Washer	Scheibe
*18	02 132 00	02 132 00	02 132 00	02 132 00	02 132 00	1 Cu skive	Cu washer	Cu Scheie
19	02 155 00	02 155 00	02 155 00	02 155 00	02 155 00	1 Skrue	Screw	Schraube
*20	02 183 00	02 183 00	02 183 00	02 183 00	02 183 00	1 Kugle, Ø2,5	Ball, Ø2,5	Kugel, Ø2,5
21	02 224 00	02 224 00	02 224 00	02 224 00	02 224 00	2 Seegerring	Circlip	Seegerring
*22	02 291 00	02 291 00	02 291 00	02 291 00	02 291 00	1 Kugle, Ø3,5	Ball, Ø3,5	Kugel, Ø3,5
*23	02 292 00	02 292 00	02 292 00	02 292 00	02 292 00	1 Kugle, Ø6,5	Ball, Ø6,5	Kugel, Ø6,5
*24	02 294 00	02 294 00	02 294 00	02 294 00	02 294 00	1 Kugle, Ø10	Ball, Ø10	Kugel, Ø10
25	02 313 00	02 313 00	02 313 00	02 313 00	02 313 00	1 Pinolskrue	Screw	Schraube
26	02 346 00	02 346 00	02 346 00	02 346 00	02 346 00	1 Skrue	Screw	Schraube
27	02 417 00	02 417 00	02 417 00	02 417 00	02 417 00	1 Fitting	Fitting	Fitting
28	02 448 00	02 448 00	02 448 00	02 448 00	02 448 00	1 Prop	Plug	Pfropfen
29	02 498 00	02 498 00	02 498 00	02 498 00	02 498 00	1 Fitting	Fitting	Fitting
30	02 551 00	02 551 00	02 551 00	02 551 00	02 551 00	1 Skrue	Screw	Schraube
31	02 584 00	02 584 00	02 584 00	02 584 00	02 584 00	2 Prop	Plug	Pfropfen
32	02 683 00	02 683 00	02 683 00	02 683 00	02 683 00	1 Stopskrue	Stop screw	Stop Schraube
33	02 685 00	02 685 00	02 685 00	02 685 00	02 685 00	1 Fjeder	Spring	Feder
34	02 831 00	02 831 00	02 831 00	02 831 00	02 831 00	1 Al skive	Al disc	Ai Scheibe
35	02 894 00	02 894 00	02 946 00	02 946 00	02 946 00	1 Sænkebremseventil	Brake valve	Bremseventil
36	91 021 00	91 021 00	91 001 00	91 001 00	91 001 00	1 Pumpekrop	Pump body	Pumpgehäuse
37	91 025 00	91 025 00	91 003 00	91 003 00	91 003 00	1 Stempelstok	Piston rod	Kolbenstange
38	91 024 00	91 024 00	91 004 00	91 004 00	91 004 00	1 Stempel	Piston	Kolbenstange
39	91 005 00	91 005 00	91 005 00	91 005 00	91 005 00	1 Pumpestempel	Pump piston	Pumpkolben
40	91 022 00	91 022 00	91 006 00	91 006 00	91 006 00	1 Cylindermøtrik	Cylinder nut	Zylindermutter
41	91 026 00	91 026 00	91 010 00	91 010 00	91 010 00	1 Adapter for stempelstok	Adapter	Adaptor
42	91 032 00	91 032 00	91 011 00	91 011 00	91 011 00	1 Cylinderrør	Cylinder tube	Zylinderrohr
43	91 033 00	91 033 00	91 017 00	91 017 00	91 017 00	2 Lejebøsning	Bearing bush	Lagerbuchse
44	91 023 00	91 023 00	91 023 00	91 023 00	91 023 00	1 Rulle	Roll	Rollen
45	91 027 00	91 027 00	91 027 00	91 027 00	91 027 00	1 Nikketøj	Tipping gear	Kippvorrichtung
46	91 028 00	91 028 00	91 028 00	91 028 00	91 028 00	1 Q-pedal	Q-pedal	Q-Fusshebel
47	91 029 00	91 029 00	91 029 00	91 029 00	91 029 00	1 Udløserbøjle	Release bracket	Auslöserbügel
48	91 030 00	91 030 00	91 030 00	91 030 00	91 030 00	1 Nikketøjsaksel	Tipping gear axle	Kippvorrichtung Achse
49	91 031 00	91 031 00	91 031 00	91 031 00	91 031 00	1 Rulleaksel	Rolling Axe	Rollenachse
50	91 034 00	91 034 00	91 034 00	91 034 00	91 034 00	1 Olieslange	Oil hose	Ölschlauch
51	91 056 00	91 056 00	91 056 00	91 056 00	91 056 00	1 Udløserspindel	Release spindle	Auslöserspindel
52	91 057 00	91 057 00	91 057 00	91 057 00	91 057 00	1 Udløserstyr	Release guide	Auslöserführung
53	95 005 02	95 005 02	95 005 02	95 005 02	95 005 02	1 Justerskrue	Adjusting screw	Justierschraube
*	09 049 00	09 049 00	09 046 00	09 046 00	09 046 00	Pakningssæt	Repair kit	Dichtungssatz

DK: Demed*mærkede dele leveres i komplet pakningssæt. Anvend altid original reservedele. Angiv venligst altid model og reservedelsnummer. Alle hoveddele kan ikke forventes leveret efter produktionsophøraft model.

GB: *indicates parts included in repair set. Please always state model and part number. Do always apply original spare parts. All major parts may not be provided as spare parts after discontinuation of production of a model.



D: Die mit*markierten Teile sind im Dichtungssatz enthalten. Bitte immer Modell und Ersatzteilnummer auf Ihren Bestellungen angeben. Immer nur Originalteile verwenden. Lieferung von allen Hauptteilen als Ersatzteile kann nach Produktions-Einstellung eines Modells nicht erwartet werden.

- ⒹK HYDRAULIK DIAGRAM
- ⒹB HYDRAULIC CHART
- Ⓓ HYDRAULISCHES DIAGRAMM

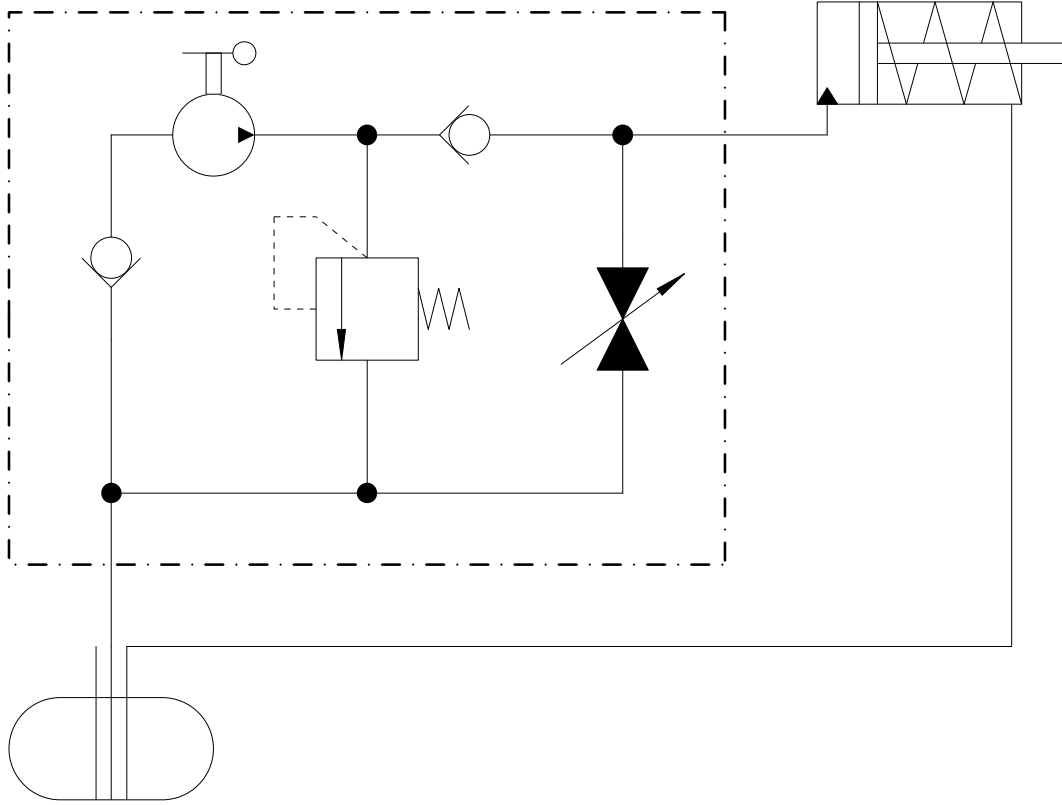

(DK) TILBEHØR
 (GB) ACCESSORIES
 (D) ZUBEHÖR

Pos.	Art. No.	Pcs.	(DK) Benævnelse	(GB) Description	(D) Bezeichnung
	36 055 00		G4 transporthjul	Pneumatic Wheels	Luftgummiräder
1	02 206 00	2	Seegerring	Circlip	Seegerring
2	02 513 00	2	Skrue	Screw	Schraube
3	02 682 00	2	Hjul	Wheel	Rad
4	36 049 00	2	Aksel f. transp.hjul	Axel for wheel	Aksel für Rad

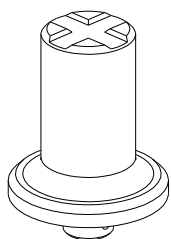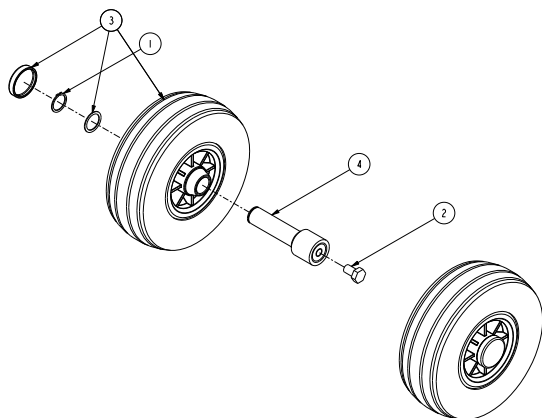


36 017 00

Forlænger
125 mm

Extension
125 mm

Verlängerung
125 mm

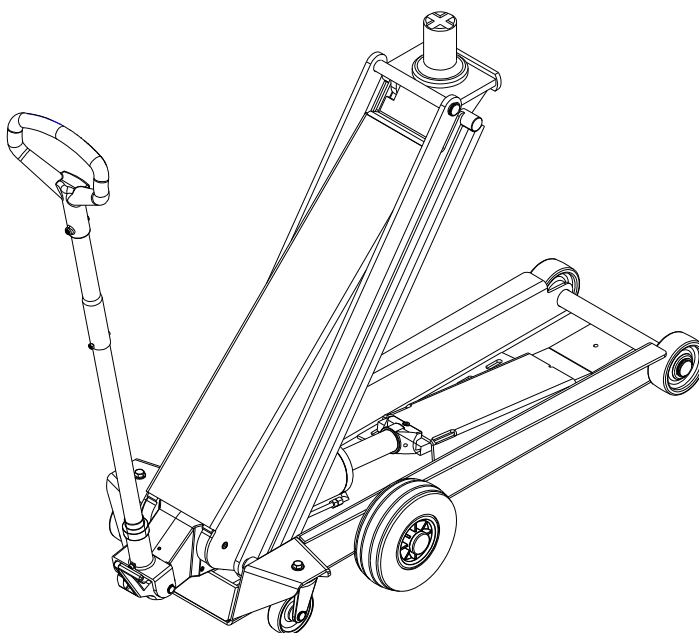

EU Overensstemmelseserklæring
EC Declaration of Conformity for Machinery
EG Konformitätserklärung
Declaration CE de conformité
pour les composants

EU Överensstämmelseforsäkran
Vaatimustenmukaisuuvakuutus
EU verklaring van overeenstemming
EU declaración de conformidad
sobre maquinaria

Directive 2006/42/EC



WEBER UK LTD

Unit 10, First Avenue, Bluebridge Ind. Est.
Halstead, Essex. CO9 2EX
Tel.: 01787 476319
Fax: 01787 274926
E-mail: sales@weberuk.com
www.weberuk.com

- (DK)** Hydrauliske donkræfte,
(N) **WDK40Q, WDK60Q, WDK100Q, WDK120Q, WDK50HLQ**
er i overensstemmelse med Maskindirektivets bestemmelser (Direktiv 2006/42/EC og EN1494) med ændring, og er i overensstemmelse med andre relevante nationale bestemmelser.
- (GB)** Hydraulic Garage Jacks,
WDK40Q, WDK60Q, WDK100Q, WDK120Q, WDK50HLQ
are in conformity with the provisions of the Machinery Directive (Directive 2006/42/EC and EN1494) as amended and with national implementing legislation.
- (D)** Hydraulische Rangierheber,
WDK40Q, WDK60Q, WDK100Q, WDK120Q, WDK50HLQ
konform sind mit den einschlägigen Bestimmungen der EG-Maschinenrichtlinie 2006/42/EC und EN1494 inklusive deren Änderungen, sowie mit dem entsprechenden Rechtserlaß zur Umsetzung der Richtlinie ins nationale Recht.
- (F)** Crics rouleurs hydraulique,
WDK40Q, WDK60Q, WDK100Q, WDK120Q, WDK50HLQ
sont conformes aux dispositions de la Directive Machine 2006/42/EC et EN1494, et aux législations nationales la transposant.
- (S)** Hydrauliska domkrafter
WDK40Q, WDK60Q, WDK100Q, WDK120Q, WDK50HLQ
Överensstämmer med Maskindirektivets bestämmelser (Direktiv 2006/42/EC och EN1494) med ändring, och är i överensstämmelse med andra relevanta nationella bestämmelser
- (SF)** Hydraulisen hallinostin käyttöohjeet,
WDK40Q, WDK60Q, WDK100Q, WDK120Q, WDK50HLQ
vastaa Konedirektiivin (direktiivi 2006/42/EC ja EN1494) määräyksiä sekä kansallista voimaantulolainsäädäntöä.
- (NL)** Hydraulische rolkrik,
WDK40Q, WDK60Q, WDK100Q, WDK120Q, WDK50HLQ
in overeenstemming zijn met de bepalingen van de Richtlijn Machines (richtlijn 2006/42/EC en EN1494) en met de essentiële veiligheidsen gezondheidseisen (ARAB).
- (E)** Los gatos hidráulicos,
WDK40Q, WDK60Q, WDK100Q, WDK120Q, WDK50HLQ
son conforme con las directrices sobre maquinaria (Directiva 2006/42/EC y EN1494) incl.enmiendas, y en conformidad con las directrices nacionales relevantes.

Viborg 01.01.10


Claus A. Christensen
General Manager